


WATCHCON

WATCHCON (Extra Remote Control)

The Remote Control contains 3 buttons for watch functions, 2 buttons for controlling your vehicle and 1 button for illuminating the LCD. A buzzer and E/L back light are also included.



● Battery Replacement


- Change the battery, when  icon is displayed.
- Powered by 1 Lithium 3V CR2032.
- To maintain full water resistance and to prevent the internal damage, ask near watch-store for replacement.

△ Note : Be cautious not to operate buttons in the water.

- Hour, minutes, seconds, (12-/24-hour format), year(2002~2052), month, date and day of the week
- Dual time
- Alarm
- Chronograph in 1/100 seconds
- Countdown timer
- Designated engine start
- Illuminating light (E/L)


WATCHCON- Change Modes

To change modes press MODE button.

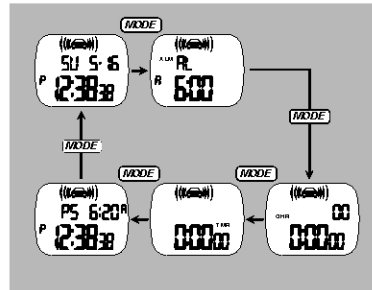


WATCHCON- Set Time & Calendar

- Press MODE button for 2 seconds to enter Real Time Setting Mode.
- Press ST.STP button to select 12 or 24-hour format.
- Press RESET to go next field, hour digits flashes.
- While hour digits are flashing, press the ST.STP button to increase the number. Hold down the ST.STP button to change the number at higher speed.
- Press MODE button to save and exit.

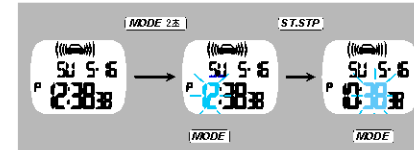


WATCHCON- Dual Time

- In real time mode, press ST.STP button to switch between the Real Time Mode and Dual Time Mode.
- Set the Dual Time Setting proceed as above.

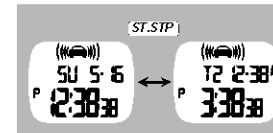


WATCHCON- Alarm

- In Real Time Mode, press MODE button to enter Alarm Mode.
- With each press of ST.STP button, alarm is engaged (🚗 Icon will be displayed.) and disengaged alternately. Alarm rings at designated time for 30 seconds.
- To stop the sound, press any button to stop the alarm.

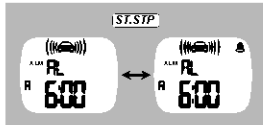


☑ Alarm Setting

- Press MODE button to enter Alarm Mode.
- Press MODE button for 2 seconds to hours digits flashes.
- Press ST.STP button to increase the number.
- Press RESET to go next field, minutes digits flashes.
- Press ST.STP button to increase the number.
- Press MODE button to save and exit.

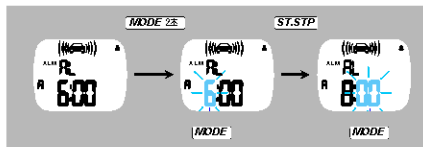


WATCHCON- Chronograph

- In real Time Mode, press MODE button to enter Chronograph Mode.
- Press ST.STP button to start/stop.
- Press RESET button to reset chrono time to zero.

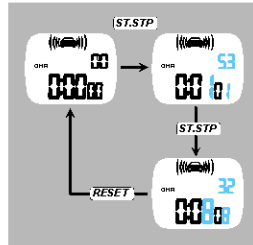


WATCHCON- Countdown Timer

- In Real Time Mode, press MODE button to enter Timer Mode.
- Press ST.STP button to start/stop/restart.
- Press RESET button to reset time to preset value.
- Press MODE button to save and exit

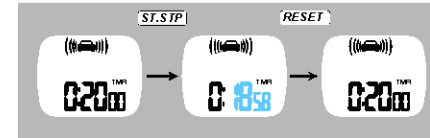


☑ Timer Setting

- In Real Time Mode, press MODE button to enter Timer Mode.
- Press MODE button for 2 seconds, hour digits flashes.
- Press ST.STP button to increase the number.
- Press RESET to go next field, minutes or second digits flashes.
- Press ST.STP button to increase the number.
- Press MODE button to save and exit.

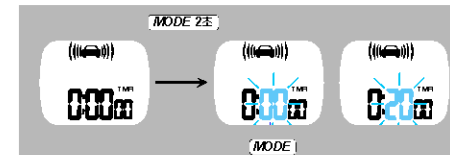


WATCHCON - Programmable Start

- In Real Time Mode, press MODE button to enter Program Start Timer.
- With each press of ST.STP button, Engine Start is engaged or disengaged.
- Press MODE button to save. When Engine Start is engaged (PROG will be displayed), the engine will start and run at the designated time. This will operate only when the system is armed and the vehicle is within RF range.

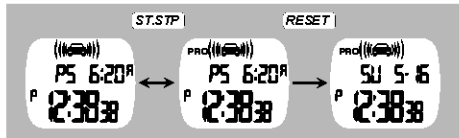

Engine Start Time Setting

- In Real Time Mode, press MODE button to enter Program Start Timer.
- Press MODE button for 2 seconds, hour digits flashes.
- Press ST.STP button to increase the number.
- Press RESET to go next field, minutes digits flashes.
- Press ST.STP button to increase the number.
- Press MODE button to save and exit.

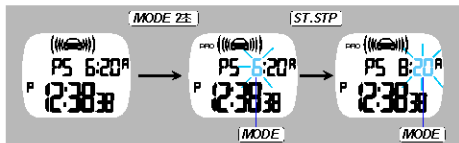

WATCHCON

PROSTAR can be used together with a WATCHCON. The code programming is same as the 2-way Remote Control, refer to page .

Door Lock/ Door Unlock	
Panic Siren	2 Seconds
Remote Start	
Trunk Release	Same time